




MULTIFUNCTIONAL TEMPORARY SUPPORT

# SAFE WORKING LOADS

## UNI-PROP - HYDRAULIC OPERATION

LOADED CONCENTRICALLY AND 1° MAX OUT OF PLUMB

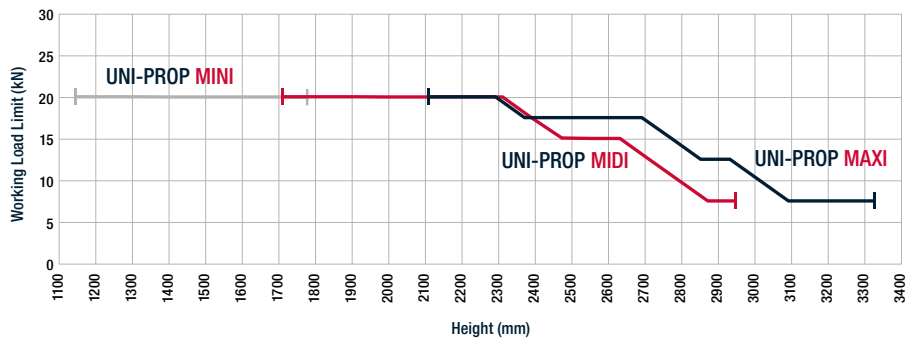


### NEVER EXCEED SAFE WORKING LOADS

- i) Safe Working Loads have been derived from load testing to BS EN 1065.
- ii) Hydraulic Safe Working Loads are calculated to a minimum Factor of Safety of 2.5 to 1 on test results.
- iii) See User Instructions to check precise Safe Working Loads by graduated extension.

## UNI-PROP - MECHANICAL OPERATION

LOADED CONCENTRICALLY AND 1° MAX OUT OF PLUMB

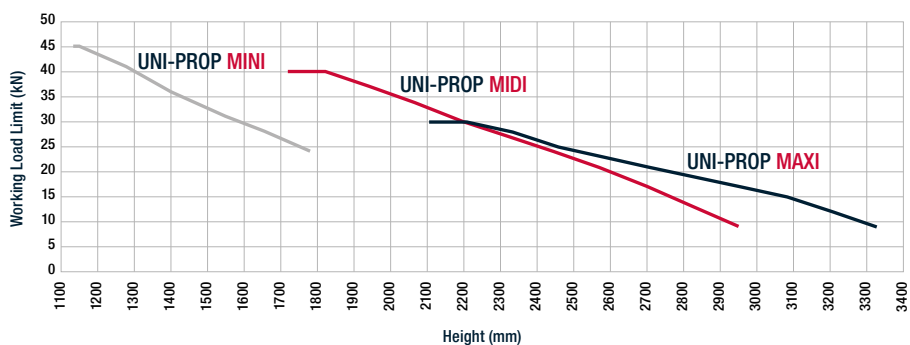

### NEVER EXCEED SAFE WORKING LOADS

- i) Safe Working Loads have been derived from load testing to BS EN 1065.
- ii) Mechanical Safe Working Loads are calculated to a minimum Factor of Safety of 2 to 1 on test results.

For more information visit [uni-prop.com](http://uni-prop.com) or contact Uni-Prop on **0800 2545 456** or [support@uni-prop.com](mailto:support@uni-prop.com)

Uni-Prop International Ltd. 19 Holywells Road, Ipswich, IP3 0DL United Kingdom

Company Number: 10402933

VAT Number: 191 390 207